


De9		A	B	C	E	F	M x P	T
10	-0.025 -0.061	16	6	4	8	16	M 8 x 1.25	10.8
13	-0.032 -0.075	18	8	5	10	20	M10 x 1.5	14
16		24	10	7	14	24	M12 x 1.75	17
20	-0.040 -0.092	27	14	9	18	32	M16 x 2.0	21
25		33	17	11	19	40	M20 x 2.5	26

Part Number		L																
TYPE	D																	
EPB	10	31	36	41	46	51	56	61										
	13	31	36	41	46	51	56	61	66	71								
	16					51	56	61	66	71	76	81	91	101	111	121	131	
	20							61	66	71	76	81	91	101	111	121	131	141
	25											121	131	141	151	161		

EXAM:

- Use when pushing up and fixing the ejector plate such as when setting or replacing the ejector pin.
- Because the L dimension is an integral number of 5mm units 1mm according to the space which is incremented in 5-mm steps, the mold can be installed in the molding machine without any need to counterbore the upper side of the ejector plate.
- Because the threaded part (F dimension) is somewhat long, it is possible to easily set the ejector plate without subjecting it to the load from the spring.

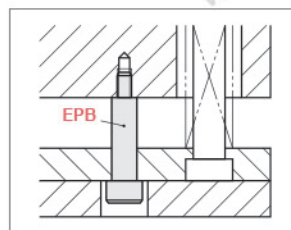

D	M x P	F	
		EPB	Shoulder bolts MSB · MSBL
10	M8 x 1.25	16	12
13	M10 x 1.5	20	16
16	M12 x 1.75	24	18
20	M16 x 2.0	32	24
25	M20 x 2.5	40	30



Order Example

TYPE	L
EPB10	- L51